



CD103GPN

Guide Pin

For use with Air-Lock and Small Air-Lock



Made in U.S.A.
External Prosthetic Components



EC REP

Advena Ltd
Pure Offices, Plato Close
Tachbrook Park
Warwick, CV34 6WE, UK



CD103GPN.revA.02082016



CD103GPN

Guide Pin

For use with Air-Lock and Small Air-Lock



Made in U.S.A.
External Prosthetic Components



EC REP

Advena Ltd
Pure Offices, Plato Close
Tachbrook Park
Warwick, CV34 6WE, UK



CD103GPN.revA.02082016



CD103GPN

Guide Pin

For use with Air-Lock and Small Air-Lock



Made in U.S.A.
External Prosthetic Components



EC REP

Advena Ltd
Pure Offices, Plato Close
Tachbrook Park
Warwick, CV34 6WE, UK



CD103GPN.revA.02082016



CD103GPN

Guide Pin

For use with Air-Lock and Small Air-Lock



Made in U.S.A.
External Prosthetic Components



EC REP

Advena Ltd
Pure Offices, Plato Close
Tachbrook Park
Warwick, CV34 6WE, UK



CD103GPN.revA.02082016

When using a CD103P11 Long Pin it is possible to have the pin bottom out in the lock. To address this you would use the CD103GPN in conjunction with the CD103PC Pin Cap.



1. Insert the CD103GPN Guide pin into the lock to the first click.
2. Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.



3. Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.
4. Advance the Guide Pin to the second click.



5. Insert the CD103GPN Guide pin into the lock to Apply Coyote Quick Adhesive to the rim of the Pin Cap and insert into the hole.
6. Let Glue set and remove Guide Pin.

Manufactured by:



419 N. Curtis Rd., Boise, ID 83706
USA (208) 429-0026
www.coyotedesign.com

When using a CD103P11 Long Pin it is possible to have the pin bottom out in the lock. To address this you would use the CD103GPN in conjunction with the CD103PC Pin Cap.



1. Insert the CD103GPN Guide pin into the lock to the first click.
2. Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.



3. Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.
4. Advance the Guide Pin to the second click.



5. Insert the CD103GPN Guide pin into the lock to Apply Coyote Quick Adhesive to the rim of the Pin Cap and insert into the hole.
6. Let Glue set and remove Guide Pin.

Manufactured by:



419 N. Curtis Rd., Boise, ID 83706
USA (208) 429-0026
www.coyotedesign.com


When using a CD103P11 Long Pin it is possible to have the pin bottom out in the lock. To address this you would use the CD103GPN in conjunction with the CD103PC Pin Cap.



1. Insert the CD103GPN Guide pin into the lock to the first click.
2. Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.



3. Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.
4. Advance the Guide Pin to the second click.

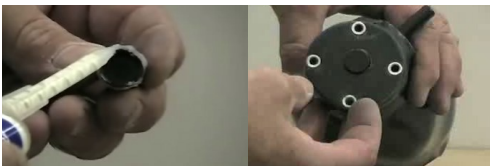

5. Insert the CD103GPN Guide pin into the lock to Apply Coyote Quick Adhesive to the rim of the Pin Cap and insert into the hole.
6. Let Glue set and remove Guide Pin.

Manufactured by:



419 N. Curtis Rd., Boise, ID 83706
USA (208) 429-0026
www.coyotedesign.com

When using a CD103P11 Long Pin it is possible to have the pin bottom out in the lock. To address this you would use the CD103GPN in conjunction with the CD103PC Pin Cap.



1. Insert the CD103GPN Guide pin into the lock to the first click.
2. Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.



3. Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.
4. Advance the Guide Pin to the second click.



5. Insert the CD103GPN Guide pin into the lock to Apply Coyote Quick Adhesive to the rim of the Pin Cap and insert into the hole.
6. Let Glue set and remove Guide Pin.

Manufactured by:



419 N. Curtis Rd., Boise, ID 83706
USA (208) 429-0026
www.coyotedesign.com